

**Autroprime**<sup>®</sup>

To operate the panel,  
turn the key clock-wise



# AUTOPRIME


Interactive Fire Detection System

Shortform User Guide in English





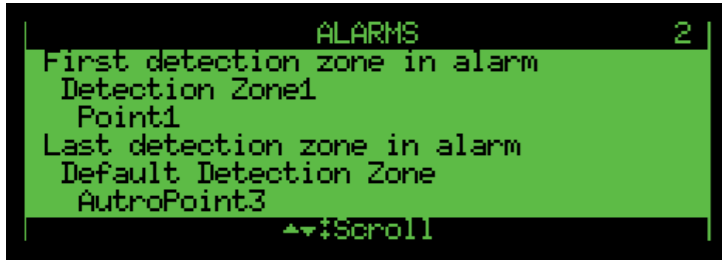

# Fire Alarm

One or several fire detectors or manual call points in one or several detection zones are signalling a Fire Alarm.




(Display Picture - Example)





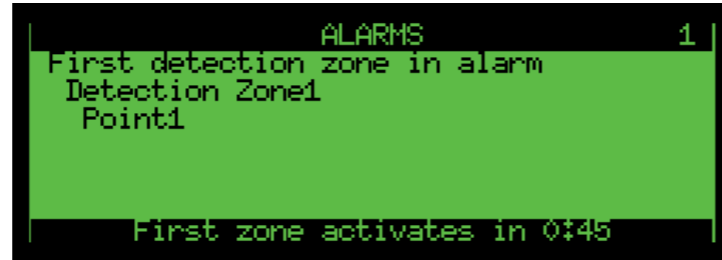

STEP	Actions to be taken - Operation Mode
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Scroll with the arrow down (/up) button to observe the point(s) in fire alarm state.
4	To view detailed information for a selected point, press Enter 
5	Investigate the scene(s) and carry out the necessary actions.
6	To silence all alarms, press the Silence Alarms button 
7	Press the Reset button 

# Fire Alarm with Alarm Delay

A point is sending an alarm signal from a Delayed Action detection zone (alarm delay is active).




(Display Picture - Example)





STEP	Actions to be taken - Operation Mode
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Scroll with the arrow down (/up) button to observe the points(s) in fire alarm state.
4	To view detailed information for a selected point, press Enter 
5	Investigate the scene(s) and carry out the necessary actions.
6	To Prolong the alarm delay, if necessary, press the Prolong Delay button 
7	If there is not a fire, the procedure can be ended by pressing the green Reset button   If there really is a fire, press the Activate Outputs button or activate the nearest manual call-point to activate alarm, carry out the necessary measures, then go to step 8.
8	To silence all alarms, press the Silence Alarms button 
9	Press the Reset button 
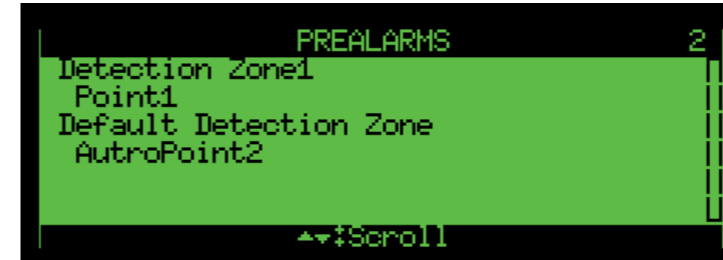
# Pre Alarm

A fire detector in one of the detection zones has entered the Pre Alarm state.




(Display Picture - Example)




STEP	Actions to be taken - Operation Mode
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Scroll with the arrow down (/up) button to observe the points(s) in pre alarm state.
4	To view detailed information for a selected point, press Enter 
5	Investigate the scene(s) and carry out the necessary actions.
6	To acknowledge a Pre Alarm, press the red Silence button 
7	Press the Reset button 

# Faults

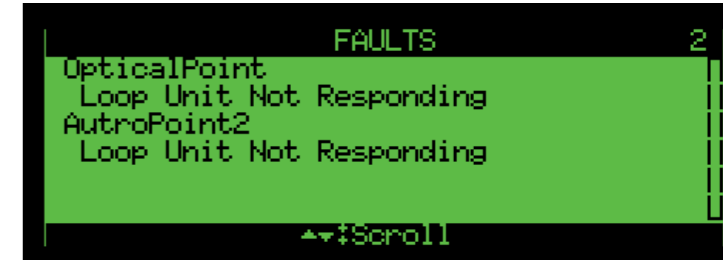A fault is indicated by one of the components (fire detectors, external equipment or other faults).



(Display Picture - Example)

STEP	Actions to be taken - Operation Mode
1	Notify service/technical personnel if necessary.
2	To silence the internal buzzer, press the Mute Panel button 
3	Scroll with the arrow down (/up) button to observe the point(s) in fault state.
4	To view detailed information for a selected point, press Enter 
5	Investigate the scene(s) and carry out the necessary actions.
6	To acknowledge the fault(s), move back one level using the Cancel button.
7	Scroll to select the desired point, press the Function button  , then select Acknowledge to acknowledge the selected fault or Acknowledge all to acknowledge all faults.
8	Press the Reset button 